


How To Eliminate “Flow Error” On Pulsatron MP Pumps

Issue

Upon startup of a standard Pulsatron MP pump (one without the Flow Verification option) a “Flow Error” will be displayed after several minutes if Flow Verification is not disabled in the program.

Solution

There are six (6) programming buttons on the lower right-hand corner of the control panel. We will be concerned with only the two (2) middle buttons ‘Yes’ and ‘No.’

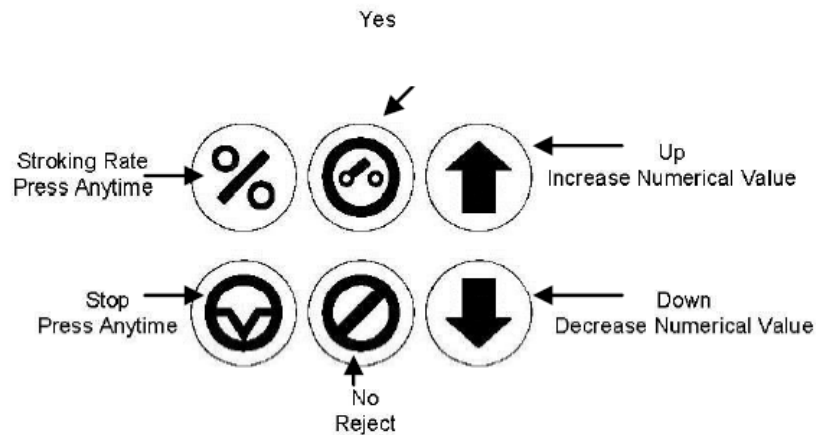

1. Press the ‘No’ button until “Setting?” appears.
2. Press the ‘Yes’ button and “Yes=On, No=Off?” will be displayed.
3. Press the ‘No’ button and “Flow Verify-Off” will be displayed.
4. Press the ‘No’ button and “Settings?” will be displayed.
5. Press the ‘No’ button to select your mode of operation, e.g., “Fixed Rate,” “Pulse Signal,” etc.

This will eliminate the “Flow Error.”